



















**For normal door access:**

1. Turn the ignition off
2. Turn door access key to disarmed
3. Open the door

**To secure the door:**

1. Close the door
2. Turn door access key to armed
3. Turn the ignition on

LED/Alarm Status		Logic
Inside Cab	Outside Cab	
 Green LED blinking	 Green light blinking	<p><b>Default OKAY Conditions:</b></p> Ignition ..... Off Door Access Key..... Armed Door (sensor)..... Closed Siren Status ..... Okay Door Sensor Status..... Okay
 Buzzer warning   Red LED flashing	 Alarm siren sounds   Red light flashing	<p><b>Alarm Conditions: Door Open without Door Access Key</b></p> Ignition ..... Off Door Access Key..... Armed Door (sensor)..... <b>Open</b> Siren Status ..... Okay Door Sensor Status..... Okay
 Green LED blinking	 Green light blinking	<p><b>Cargo Loading Conditions: Okay</b></p> Ignition ..... Off Door Access Key..... <b>Disarmed</b> Door (sensor)..... <b>Open</b> Siren Status ..... Okay Door Sensor Status..... Okay

LED/Alarm Status		Logic
Inside Cab	Outside Cab	
 Buzzer warning  Red LED flashing	 Alarm siren sounds  Red light flashing	<b>Alarm Conditions: Ignition On while Door is Open</b> Ignition ..... On Door Access Key..... On or Off Door (sensor) ..... Open Siren Status ..... Okay Door Sensor Status..... Okay
 Yellow LED blinking	 Yellow light blinking	<b>Siren Hardware Error:</b> Ignition ..... Off Door Access Key..... Armed Door (sensor) ..... Closed Siren Status ..... Error Door Sensor Status..... Okay
 Yellow LED blinking	 Yellow light blinking	<b>Door Sensor Hardware Error:</b> Ignition ..... Off Door Access Key..... Armed Door (sensor) ..... Closed Siren Status ..... Okay Door Sensor Status..... Error
<p><b>Note:</b> Alarm Condition and Alarm outputs are unchanged by hardware error detection. However, when no alarm condition is present, the LEDs indicate the hardware error condition with blinking yellow lights.</p>		
 Solid green LED	 Solid green LED	Truck ignition is on, door is closed, and the door access key is armed.