

PURKEYS

A MISSION CRITICAL ELECTRONICS BRAND

STATUS-03 / STATUS-05

INSTALLATION GUIDE



CONTENTS

| | |
|---|---|
| General Information | 2 |
| Part Numbers | 2 |
| LED Indication | 3 |
| Mounting the Status Controller..... | 4 |
| Status Liftgate Battery Harness | 5 |
| Limited Commercial Warranty Policy..... | 8 |

GENERAL INFORMATION

The Status™ system has an easy-to-interpret LED indicator to inform drivers and technicians of the current status of a battery. A quick glance at the Status Controller assures the driver or technician that the batteries are ready to go, or alerts the driver that the batteries need maintenance.

PART NUMBERS

| Part Number | Harness Length |
|-------------|----------------|
| STATUS-03 | 50 ft |
| STATUS-05 | 70 ft |

STATUS-03/-05 INSTALLATION GUIDE

LED INDICATION




Battery LED

| LED | Condition | Action Needed |
|----------------------|---|--|
| Solid Green | Charging mode | None |
| Slow Flashing Green | Batteries in good state of charge (more than 12.4 volts) | None |
| Slow Flashing Orange | Batteries in low state of charge (voltage between 6.0 and 12.39 volts) | Charge and test batteries |
| No LED | Open circuit from battery positive and Status or disconnected ground in battery box | Repair circuit by repairing the wire or replacing the fuse |

MOUNTING THE STATUS CONTROLLER

Step 1: Mount the Status controller at the front of the trailer via the mounting holes on the plate that the controller is mounted to.

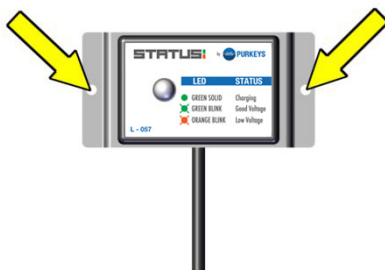

STATUS-03/-05 INSTALLATION GUIDE

STATUS LIFTGATE BATTERY HARNESS

Step 1: Route the jacketed 2-conductor liftgate battery harness behind the front plate, then behind the header plate through the air/electrical tube to the center channel.




Step 2: Route the jacketed 2-conductor liftgate battery harness in the center channel toward the back of the trailer. Secure with the supplied wire ties or cable clamps as you go.




Note: Place the supplied cable clamps along the 2-conductor jacketed wire every 18 inches to ensure proper support for the cable. Avoid sharp edges and possible chaffing points.

Step 3: Once you are near the area where the liftgate battery box is located, begin routing the jacketed 2-conductor liftgate battery harness into the liftgate battery box through a dome nut or rubber grommet.

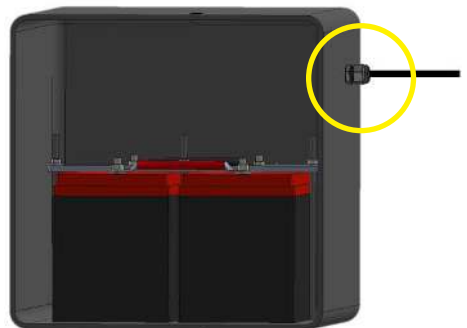

Note: Ensure that the 2-conductor jacketed wire enters the liftgate battery box through a dome nut or rubber grommet to prevent chaffing of wire, which could result in a possible electrical short in the system.

Step 4: Position the jacketed 2-conductor liftgate battery harness so that it will reach the liftgate batteries with a little extra slack in the cable. Mark the wire so that it can be taken back out of the battery box to be terminated.

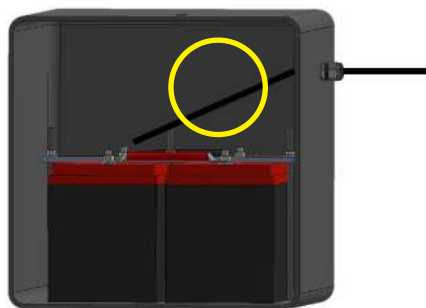

Note: If your battery box includes a slide-out tray, include enough slack to allow the tray to fully extend without tugging on the wire connections.

Step 5: Pull the jacketed 2-conductor back out of the box (easier to work on) and cut off the excess at your mark.



Step 6: Cut the jacketed portion off of the conductor about 8 inches.




Step 7: Apply the supplied 3/8 inch black heat shrink where the jacket was stripped off.



STATUS-03/-05 INSTALLATION GUIDE

Step 8: Strip 3/8 of an inch of insulation off both red and black wires.

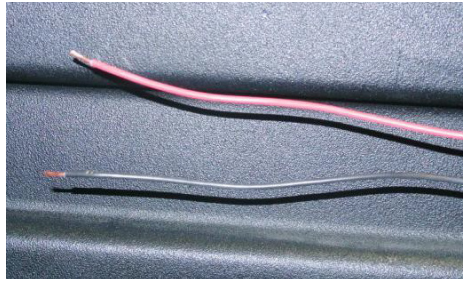

Step 9: Route the jacketed 2-conductor liftgate battery harness back into the liftgate battery box. Slide the supplied black ¼ inch heat shrink over the black wire. Slide (2) 2 inch pieces of the supplied red ¼ inch heat shrink over the red wire. Crimp on the 3/8 inch ring terminal onto the black wire. Crimp on the supplied 2 amp fuse holder to the red wire. Solder and heat shrink both connections.



Step 10: Attached the 2 amp fuse holder to liftgate battery positive and the black ground wire to the liftgate battery negative.



Installation Complete.

LIMITED COMMERCIAL WARRANTY POLICY

MCE Purkeys FE, LLC (hereafter “Purkeys”), warrants each product to be free of defects in material or workmanship under normal use and service. This warranty is for the benefit of Original Equipment Manufacturers, Dealers, Warehouse Distributors, Fleets, or other End Users (hereafter “Customers”) and covers products manufactured and/or branded by Purkeys and sold new to Customers either directly by Purkeys or by its authorized dealers, distributors, or agents. The length of the Warranty Period is 36 months. Products from other manufacturers, that are branded by said manufacturer, will carry the manufacturer’s original stated warranty.

The warranty period commences on the in-service or install date and is not transferable. Failure to provide the in-service or install date on the warranty claim form will cause the warranty period to begin on the date the part was manufactured, or date of sale recorded on the original sales invoice, whichever is earlier.

A completed warranty claim form should accompany all parts submitted to Purkeys for consideration for repair or replacement under warranty. The submitted claim form should contain all of the information required. Lack of a properly or fully completed claim form will result in delay or denial of warranty claim. Claims must be submitted no later than 30 days after part is removed. An RMA# should be requested prior to returning any product for warranty consideration. Please contact the Purkeys’ Warranty Department to request an RMA# at warranty@purkeys.net and to provide your warranty claim information.

This warranty does not apply if, in sole judgment of Purkeys, the product has been damaged or subjected to accident, faulty repair, improper adjustment, improper installation or wiring, neglect, misuse, or alteration or if the product failure is caused by defects in peripheral vehicle components or components attached to the Product or failure of a part not manufactured by Purkeys.

This warranty shall not apply if any Purkeys product is used for a purpose for which it is not designed or is in any way altered without the specific prior written consent of Purkeys. ANY product alleged by a Customer to be defective must be inspected by Purkeys as a part of the warranty claims process in order to confirm that the part has failed as a result of a defect in material or workmanship.

Transportation for products and parts submitted to Purkeys for warranty consideration must be prepaid by Customer. Repaired or replaced products and or components will be returned to Customer pre-paid by Customer or “freight collect” to the address provided by Customer in the warranty claim form. No charge will be made for labor or material in effecting such repairs.

The Warranty provided by Purkeys hereunder is specifically limited to repair or replacement of the Product as Purkeys deems most appropriate in its sole discretion. No labor reimbursement will be provided. Purkeys neither assumes nor authorizes any other person to assume on its behalf any other warranty or liabilities in connection with Purkeys products. The Warranty does not apply to fuses or other “consumable” or maintenance items which are or may be a part of any Purkeys product.

THIS WARRANTY DOES NOT APPLY TO LOSS OF VEHICLE OR EQUIPMENT, LOSS OF TIME, INCONVENIENCE, OR OTHER INCIDENTAL OR CONSEQUENTIAL DAMAGES. PURKEYS SPECIFICALLY DISCLAIMS AND SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES arising out of or from the use of Purkeys products by the Customer.

THIS LIMITED WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES, INCLUDING COMMON LAW WARRANTIES OF FITNESS FOR A PARTICULAR PURPOSE, MERCHANTABILITY, AND ANY OTHER EXPRESS OR IMPLIED WARRANTIES. ALL OTHER SUCH WARRANTIES ARE SPECIFICALLY DISCLAIMED.

This Limited Commercial Warranty Policy supersedes all previous Warranty Policies issued by Purkeys.

STATUS-03/-05 INSTALLATION GUIDE



WATT *Keeps You Trucking*